


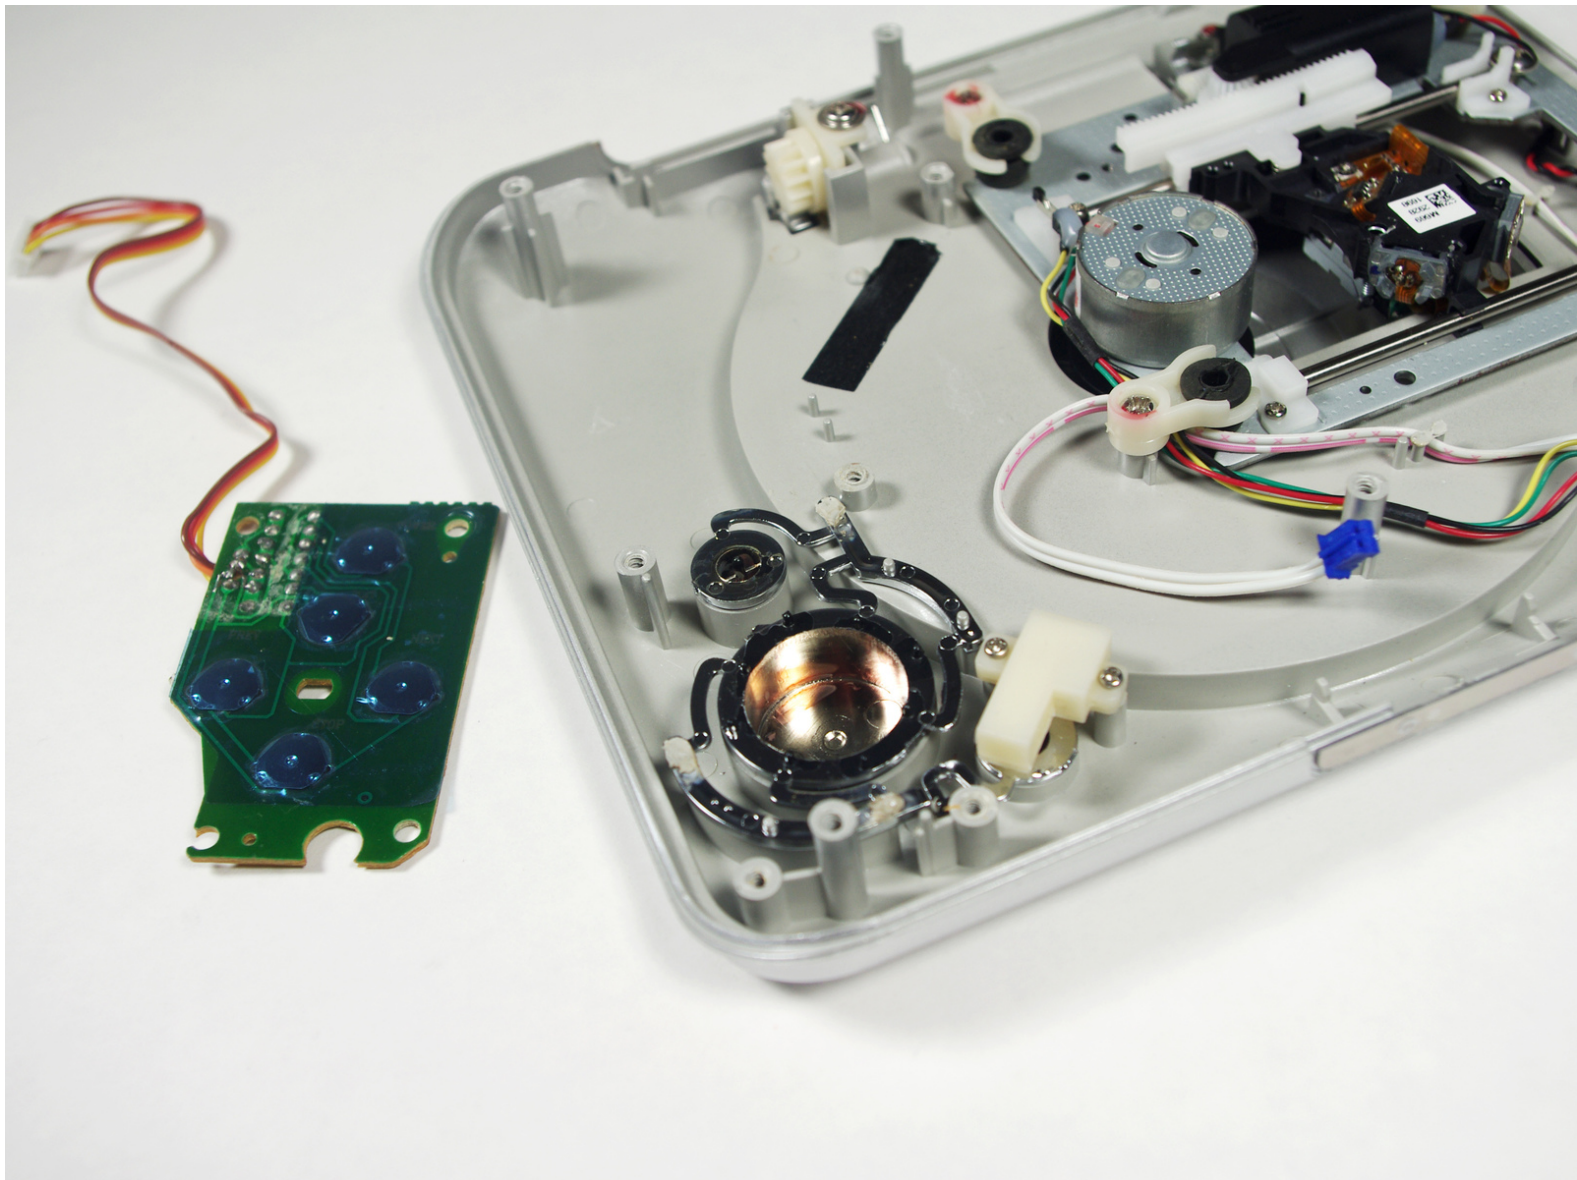

# Coby DVD209 Circuit Board for Buttons Replacement

This guide will show you how to install a new Circuit board for the play/rewind/fastforward/power buttons.

Written By: Yufay Chow





## TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



## PARTS:

- [Circuit Board for Buttons](#) (1)

## Step 1 — The bottom portion of the DVD player



- Press the eject button to view the laser inside.
- Using the blue plastic tool and the tweezers, remove the ribbon cable.


## Step 2




- Remove the six 1cm screws on the bottom of the device with the Phillips #1 screwdriver.
- ⚠ Do not lift the top of the DVD player too quickly because there are wires attached on the inside.
- Pry the top of the device open from the right side where the buttons are located.




## Step 3

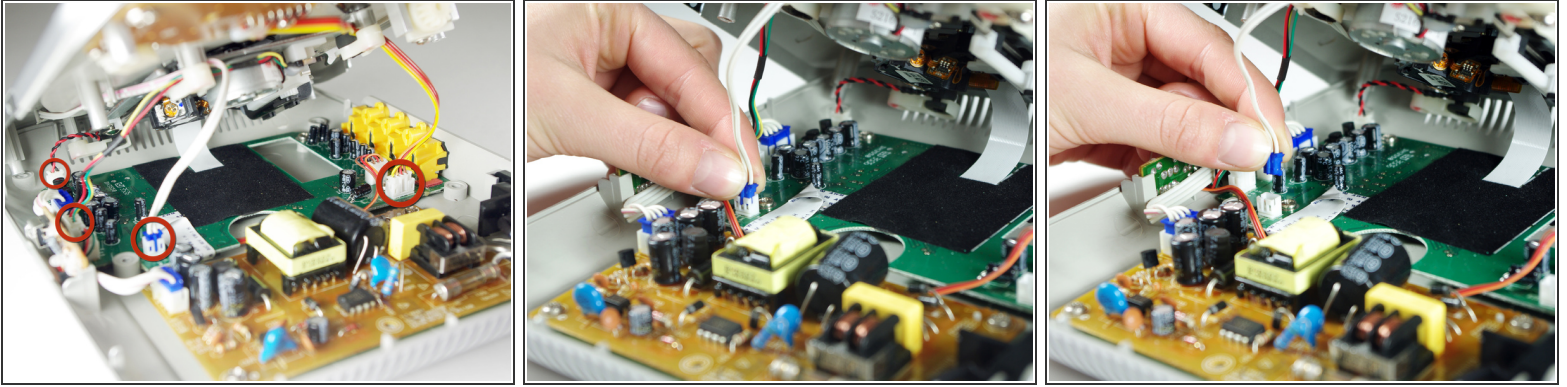

 When pulling the ribbon cables out, make sure not to pull by the wires, as this can cause damage to them.


- Pinch the plastic adapter with two fingers to remove the wires circled in red from the circuit board.

## Step 4 — Circuit Board for Buttons

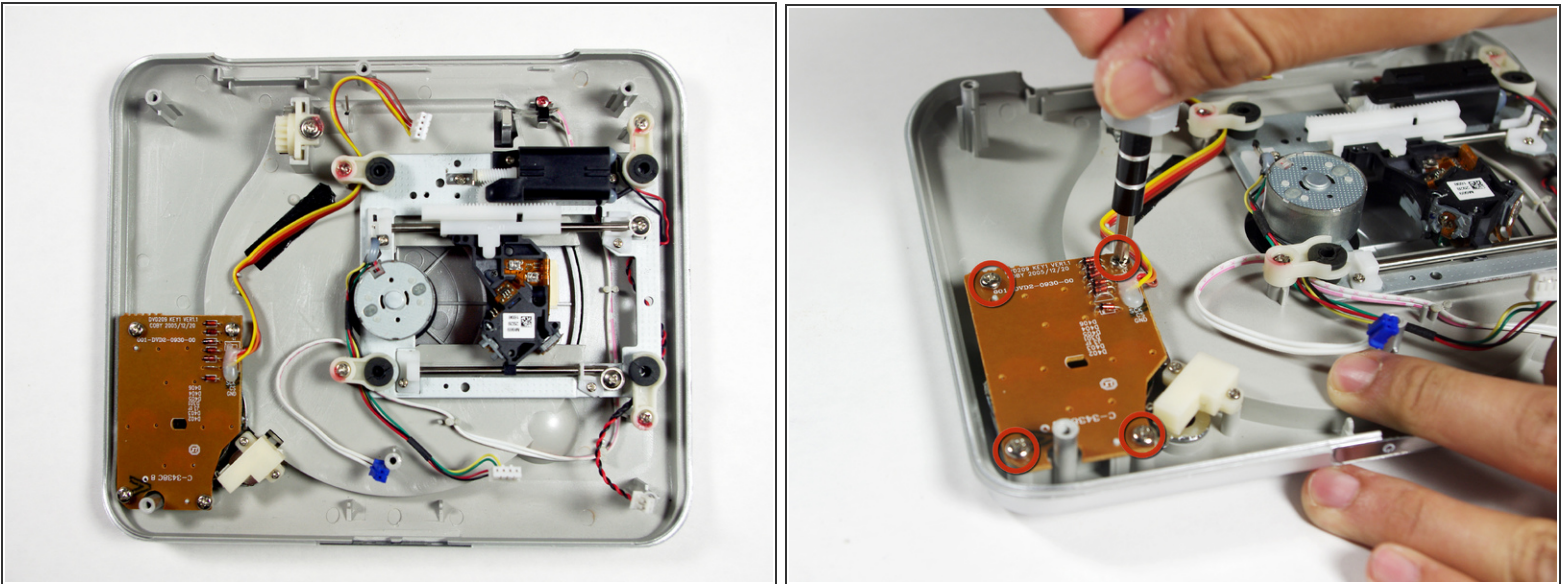

- Take the top portion of the DVD player and orient the device as shown in the first picture.
- Remove the four 0.2" screws circled in red.

## Step 5

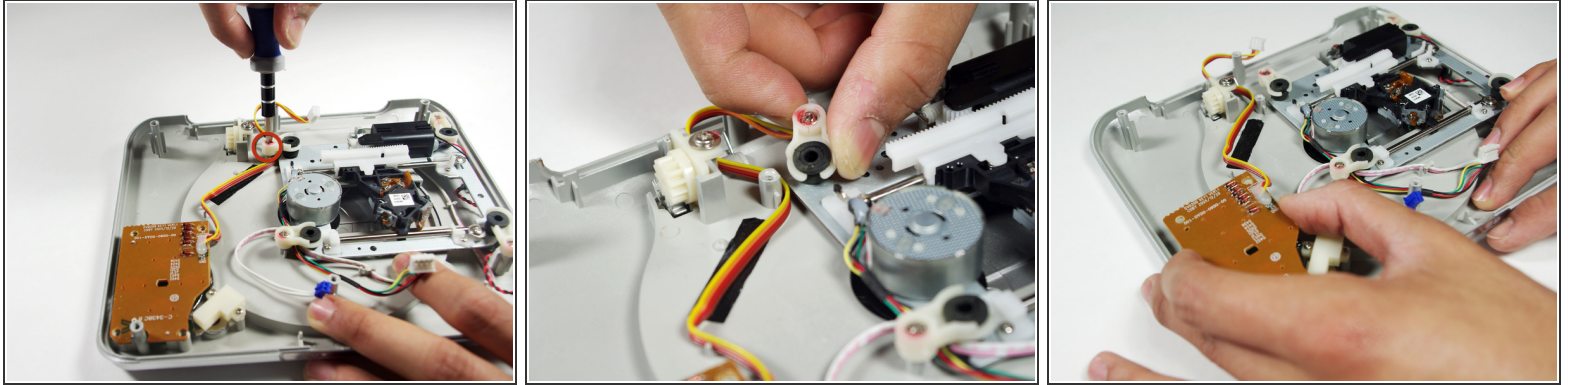

- Loosen the screw circled in red.
- ⓘ The screw will not come out of the plastic knob.
- Turn the plastic knob 90 degrees to the right so that the cable comes out freely.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 09:27:37 PM.